



Specifications

Functionality	Standard	PRIME
	<i>Cloud-based network management for distributed enterprises</i>	<i>Advanced, location-based all device network management</i>
Dashboard		
Home Dashboard (Entire Network)	✓	✓
Analytics	✓	✓
+ Aggregate Data Usage	✓	✓
+ Cellular Data	✓	✓
+ Modem (Carrier/Operator) Usage	✗	✓
Client Usage	✗	✓
Location Services GeoView Map (Entire Network)	✗	✓
Device		
Device Dashboard / Analytics	✓	✓
Client Analytics	✗	✓
Edit Configuration	✓	✓
Net Interface Status	✓	✓
Export Device/Net Interface Config	✓	✓
Rogue AP Detection	✓	✓
Copy Config to Group	✓	✓
Clear Config	✓	✓
Troubleshooting	✓	✓
+ Ping	✓	✓
+ Traceroute	✓	✓
Reboot	✓	✓
Restore to Defaults	✓	✓
Speed Test	✓	✓
Device Logs	✓	✓
Activity Log	✓	✓
Diagnostic Data	✓	✓
WiFi Site Survey	✓	✓
Location Services	✗	✓
+ Map Location – GeoView	✗	✓
+ Geo-fence	✗	✓
Linked Router Management (LLDP)	✗	✓
Advanced Enterprise Routing	✗	✓
+ OSPF/BGP/RIP	✗	✓
+ VRRP	✗	✓
+ STP	✗	✓
+ NHRP	✗	✓
More Advanced VPN & Tunneling Protocols	✗	✓
+ OpenVPN (SSL VPN) ¹	✗	✓
+ L2TP	✗	✓
NEMO/DMNR Primary	✗	✓
NEMO/DMNR Failover	✗	✓
Console	✗	✓
+ Command Line Interface (CLI)	✗	✓
+ Out-of-Band Management	✗	✓
Modems		
Multi-carrier Software Defined Radio	✓	✓
Firmware Management & Updates	✓	✓
Groups		
Group Dashboard	✓	✓
Client Dashboard	✗	✓
Edit Configuration	✓	✓
Router Firmware Updates	✓	✓
Location Services	✗	✓
+ Map Location – GeoView	✗	✓
Accounts and Users		
Manage Users	✓	✓
Manage Permissions	✓	✓
Alerts & Logs		
Alert Management	✓	✓
Account Activity Log	✓	✓